

## Bypassing Zones on a DSC Panel

Star (\*) + (1) + (two digit zone number) + (#). That's it you are done!

For example if you wanted to bypass zone 4 your format would be:

\*1 04 #

If you wanted to bypass zone 16 your format would be:

\*1 16 #

If your installer programmed your system for user code bypassing your format to bypass zone 4 assuming your user code is 1234 your format would be:

\*1 1234 04#

Similarly if you wanted to bypass zone 16 if the system is programmed to enter a valid user code to bypass zones. Assuming your user code is 1234, your format would be:

\*1 1234 16#

To remove the bypass from a zone it's the same steps for example if you wanted to remove the bypass from zone 4 your format would be

\*1 04 #

If more than one zone is needed to be bypassed for example zones 1, 8, 12 and 16 your format would be

\*1 01 08 12 16 #

If the user code 1234 is required to bypass the same zones your format would be

\*1 1234 01 08 12 16 #

\*1 OR \*1 USER CODE Enters you into the system's bypassing mode

The zone numbers are always two (2) digits long that means zones 1 - 9 will be entered as zones 01 - 09. Most keypads display all the zones that are bypassed by turning the respective zone numbers ON when bypassed and OFF when the bypass is removed from a particular zone.

( # )The pound or number sign saves the selected bypassed zone or zones and exits the bypass mode:

- The **FIRST** option "Bypassing without user code entry" is generally recommended for most **HOME** users
- The **SECOND** option "Bypassing with user code entry" is generally recommended for most **BUSINESSES** to prevent would be opportunists from bypassing areas of your premises unknowing to you, thus giving them the opportunity to break in the premises undetected.

**NOTE:** Every time the system is Armed and Disarmed the bypass on most bypassed zones will be removed. If zone bypassing is still required the zones will have to be re-bypassed before arming the system. There is an exception, on some panels 24 hour zones may stay bypassed through arming and disarming. On these zones you have to manually remove the bypass by following the above procedures a second time for the 24 hour zones.